 


EW41

QUICK START GUIDE

UK

Please refer to the installation manual for more details

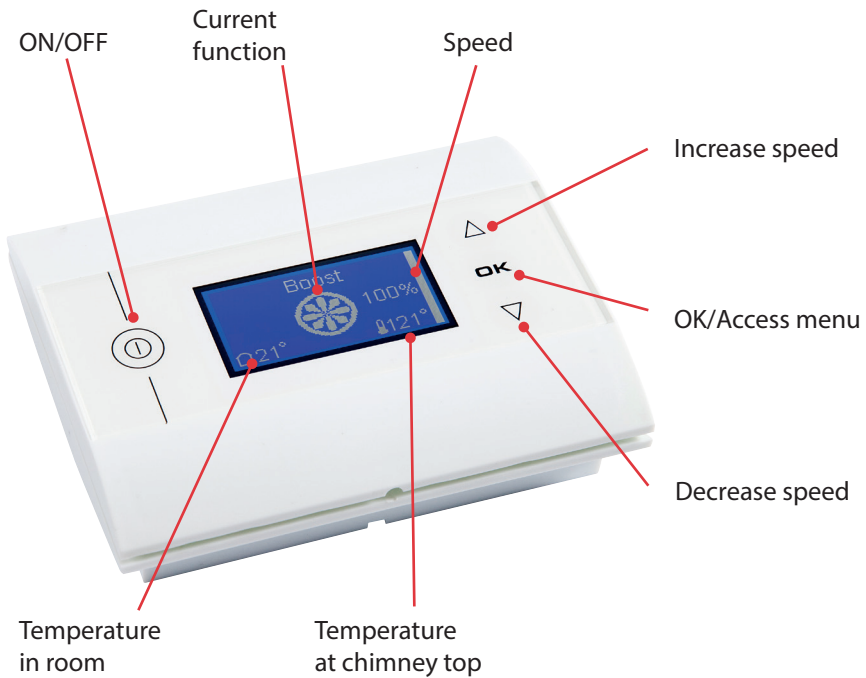



The display will turn on when pushing one of the buttons.
After a short period it will automatically turn off the display.

The display contrast level and the backlight can be adjusted in the menu.

exodraft

Lighting the fire in the fireplace/stove

1. Press the ON/OFF-button  to turn on the EW41 display.
The display will show OFF.
2. Start the chimney fan by pressing the ON/OFF-button  again.
The display will show **BOOST**.



The chimney fan will run at maximum speed for 7 minutes (default setting) and thereafter continue at the operating speed it was running at last time it was in operation.




The boost period and speed can be changed under settings (see installation manual for details)

2. Light the fire while the fan is in boost mode.

If the temperature sensor is activated and you forget to switch on the chimney fan before lighting the fire, the fan will start automatically when the temperature at the top of the chimney reaches the preset start temperature. The factory setting is 40°C.



PLEASE NOTE : We recommend turning on the fan manually *before* lighting the fire!

3. To increase or decrease the fan speed use the up  and down  arrow buttons. The display will show the setting.
4. The display will automatically return to sleep mode and turn the backlight off. Turn the display backlight on again by clicking any button

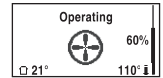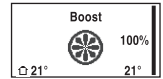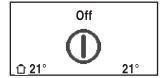


When refuelling

1. When it is time to refuel, the display will show **RELOAD**, a low audio signal (beeps) sounds twice. It is possible to turn this signal off - see installation manual for details.
2. If you wish to add new fuel, press on the **OK** button before doing so. To prevent spoke spilling into the room the fan speed then increases to maximum for 3 minutes, before returning to the previously set speed.

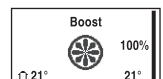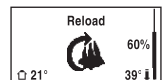

Turning off the fan - two options

- A. Manually: The fan is turned off by pressing the ON/OFF button once. 


NOTE: If the temperature sensor is activated the fan cannot be turned off manually as long as the temperature is above the stop temperature setting.







- B. Automatically: After the last refuelling, the temperature in the chimney will gradually fall. If the temperature sensor is activated the chimney fan will stop automatically when the temperature in the chimney drops below the set stop temperature. Factory setting 30°C.

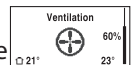A 45 minutes post purge period is factory set to ensure that the fuel has been completely combusted and that the last of the smoke has been extracted. Both the stop temperature and the post purge period can be changed in the settings (see installation manual for details)

Using the fan to ventilate the room

The chimney fan can be used even when there is no fire in the fireplace or stove. In this case it helps to ventilate the room or ensure that the soot and dust particles are extracted when you clean your fireplace/stove. When cleaning the chimney always clean the fan




 
 
 
1. Press the ON/OFF button to turn on the display 
2. Start the chimney fan by pressing the ON/OFF-button  again. The display will show **BOOST**. To go straight to ventilation mode press the down button  to set the fan speed
3. To increase or decrease the fan speed use the up  and down  row buttons. The display will show the setting.
4. Turn off the fan by pressing the ON/OFF button 

Error messages

1. If an error is registered, the display on the control panel will be lit and the type of alarm shown. The display will show ERROR and the error type will be listed below as seen here on the right.

An alarm tone will beep 5 times if the alarm is 03 (high temp.) or 04 (power failure) and the display will stay lit. To turn off the light press **OK**.

2. Follow instructions in the installation manual for solution to error.

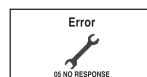

Access Menu / information logs

1. Press the **OK** button for 3 seconds to access the menu.
2. Choose menu with the up Δ and down ∇ buttons and select required option with **OK**
3. To exit the settings, press the ON/OFF button $\text{\textcircled{\textcircled{\downarrow}}}$

In the settings menu the following settings can be adjusted or information logs can be accessed. See installation manual for details

Chimney fan settings:

- Start temperature,
- Stop temperature,
- Boost time,
- Post-purge/automatic stop time

System settings:

- Language setting,
- Display contrast setting
- Backlight setting
- Buzzer setting

Log:

- Power consumption readout
- Error log readout.
- Version number readout

Service:

- Service settings.

The logo for "exodraft" features the word in a bold, lowercase sans-serif font. A red swoosh underline starts under the 'x' and extends under the 't'. A red curved line is positioned above the 'o' and 'd'.