
EBC22



Instructions for fitting, installation and operation

Read and save these instructions!

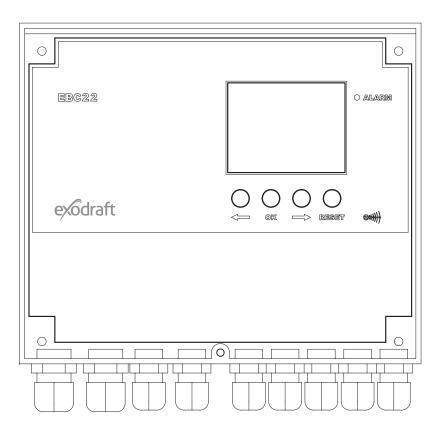

UK

| 1. | Produ | uct information | . 4 |
|----|--|--|--|
| •• | 1.1 | Delivery | |
| | 1.1 | Accessories | |
| | | Fitting. | |
| | 1.3 | | |
| | 1.3.1 | Cable length | |
| | 1.3.2 | Connection diagram | |
| | 1.4 | Layout of the user interface | |
| | 1.4.1 | Panel | |
| | 1.4.2 | Light emitting diodes and terminal board | |
| | 1.4.3 | Display | 9 |
| | 1.5 | Introduction to the user interface | . 10 |
| | 1.6 | Set-up | . 10 |
| | 1.6.1 | Setting the chimney draft | |
| | 1.7 | Service menu | |
| | 1.7.1 | | |
| | 1.7.2 | Overview of the service menu | 14 |
| | | | |
| 2. | Press | ure-controlled regulation of the chimney fan | .15 |
| | 2.1 | Use | . 15 |
| | 2.2 | Method of operation | |
| | 2.3 | Electrical connection | |
| | 2.4 | Sample wiring diagrams | |
| | 2.4.1 | Single- or two boiler application | |
| | 2.4.1 | Single boiler application with potential free contact in boiler | |
| | | | |
| | 2.4.3 | 2 boiler application with continuous operation of chimney fan | |
| | 2.4.4 | Solid fuel boiler with temperature sensor | |
| | 2.5 | User menu. | |
| | 2.5.1 | Layout of the user menu | |
| | 2.5.2 | Operating the user menu | |
| | 2.6 | Set-up | |
| | 2.7 | Commissioning | . 22 |
| 2 | 2 | ge speed regulation of exodraft chimney fan | ~~ |
| 3. | - | | |
| | 3.1 | Use | |
| | | | |
| | 3.2 | Method of operation | |
| | 3.3 | Electrical connection | . 23 |
| | - · - | Electrical connection Sample wiring diagrams | . 23 . 23 |
| | 3.3 | Electrical connection Sample wiring diagrams 1 x 2-stage boiler 1 | . 23 . 23 . 24 |
| | 3.3 3.4 | Electrical connection Sample wiring diagrams | . 23 . 23 . 24 |
| | 3.3 3.4 3.4.1 | Electrical connection Sample wiring diagrams 1 x 2-stage boiler 1 | . 23 . 23 . 24 . 25 |
| | 3.3 3.4 3.4.1 3.4.2 | Electrical connection | . 23 . 23 . 24 . 25 . 26 |
| | 3.3 3.4 3.4.1 3.4.2 3.5 3.5.1 | Electrical connection | . 23 . 23 . 24 . 25 . 26 . 26 |
| | 3.3 3.4 3.4.1 3.4.2 3.5 | Electrical connection | . 23 . 23 . 24 . 25 . 26 . 26 . 26 |
| | 3.3 3.4 3.4.1 3.4.2 3.5 3.5.1 3.5.2 3.6 | Electrical connection | . 23 . 23 . 24 . 25 . 26 . 26 . 26 . 27 |
| | 3.3 3.4 3.4.1 3.4.2 3.5 3.5.1 3.5.2 3.6 3.6.1 | Electrical connection | . 23 . 24 . 25 . 26 . 26 . 26 . 26 . 27 . 27 |
| | 3.3 3.4 3.4.1 3.4.2 3.5 3.5.1 3.5.2 3.6 3.6.1 3.7 | Electrical connection | . 23 . 24 . 25 . 26 . 26 . 26 . 26 . 27 . 27 . 27 . 28 |
| 4. | 3.3 3.4 3.4.1 3.4.2 3.5 3.5.1 3.5.2 3.6 3.6.1 3.7 | Electrical connection | . 23 . 24 . 25 . 26 . 26 . 26 . 26 . 27 . 27 . 27 . 28 |
| 4. | 3.3 3.4 3.4.1 3.4.2 3.5 3.5.1 3.5.2 3.6 3.6.1 3.7 | Electrical connection | . 23 . 24 . 25 . 26 . 26 . 26 . 27 . 27 . 27 . 28 |
| 4. | 3.3 3.4 3.4.1 3.4.2 3.5 3.5.1 3.5.2 3.6 3.6.1 3.7 Press | Electrical connection | . 23 . 23 . 24 . 25 . 26 . 26 . 26 . 26 . 27 . 27 . 27 . 28 . 29 . 29 |
| 4. | 3.3 3.4 3.4.1 3.4.2 3.5 3.5.1 3.5.2 3.6 3.6.1 3.7 Press 4.1 | Electrical connection | . 23 . 23 . 24 . 25 . 26 . 26 . 26 . 26 . 27 . 27 . 27 . 28 . 29 . 29 |
| 4. | 3.3 3.4 3.4.1 3.4.2 3.5 3.5.1 3.5.2 3.6 3.6.1 3.7 Press 4.1 4.2 | Electrical connection | . 23 . 23 . 24 . 25 . 26 . 26 . 26 . 27 . 27 . 27 . 27 . 27 . 29 . 29 . 29 |
| 4. | 3.3 3.4 3.4.1 3.4.2 3.5 3.5.1 3.5.2 3.6 3.6.1 3.7 Press 4.1 4.2 4.3 4.4 | Electrical connection | . 23 . 23 . 24 . 25 . 26 . 26 . 26 . 27 . 27 . 27 . 27 . 27 . 29 . 29 . 29 . 29 |
| 4. | 3.3 3.4 3.4.1 3.4.2 3.5 3.5.1 3.5.2 3.6 3.6.1 3.7 Press 4.1 4.2 4.3 4.4 4.4.1 | Electrical connection | . 23 . 23 . 24 . 25 . 26 . 26 . 26 . 27 . 27 . 27 . 27 . 29 . 29 . 29 . 29 . 30 |
| 4. | 3.3 3.4 3.4.1 3.4.2 3.5 3.5.1 3.5.2 3.6 3.6.1 3.7 Press 4.1 4.2 4.3 4.4 4.4.1 4.5 | Electrical connection | . 23 . 23 . 24 . 25 . 26 . 26 . 26 . 27 . 28 . 27 . 28 . 29 . 29 . 29 . 29 . 30 . 31 |
| 4. | 3.3 3.4 3.4.1 3.4.2 3.5 3.5.1 3.5.2 3.6 3.6.1 3.7 Press 4.1 4.2 4.3 4.4 4.4.1 4.5 4.5.1 | Electrical connection | . 23 . 23 . 24 . 25 . 26 . 26 . 27 . 27 . 27 . 27 . 27 . 29 . 29 . 29 . 29 . 29 . 30 . 31 . 31 |
| 4. | 3.3 3.4 3.4.1 3.4.2 3.5 3.5.1 3.5.2 3.6 3.6.1 3.7 Press 4.1 4.2 4.3 4.4 4.4.1 4.5 4.5.1 4.6 | Electrical connection | . 23 . 23 . 24 . 25 . 26 . 26 . 26 . 27 . 27 . 28 . 29 . 29 . 29 . 29 . 30 . 31 . 31 . 32 |
| 4. | 3.3 3.4 3.4.1 3.4.2 3.5 3.5.1 3.5.2 3.6 3.6.1 3.7 Press 4.1 4.2 4.3 4.4 4.4.1 4.5 4.5.1 | Electrical connection | . 23 . 23 . 24 . 25 . 26 . 26 . 26 . 27 . 27 . 28 . 29 . 29 . 29 . 29 . 30 . 31 . 31 . 32 |
| | 3.3 3.4 3.4.1 3.4.2 3.5 3.5.1 3.5.2 3.6 3.6.1 3.7 Press 4.1 4.2 4.3 4.4 4.4.1 4.5 4.5.1 4.6 4.7 | Electrical connection | . 23 . 23 . 24 . 25 . 26 . 26 . 26 . 27 . 27 . 27 . 28 . 29 . 29 . 29 . 29 . 30 . 31 . 31 . 32 . 32 |
| 4. | 3.3 3.4 3.4.1 3.4.2 3.5 3.5.1 3.5.2 3.6 3.6.1 3.7 Press 4.1 4.2 4.3 4.4 4.4.1 4.5 4.5.1 4.5 4.5.1 List o | Electrical connection . Sample wiring diagrams . 1 x 2-stage boiler. 2 x 1-stage boilers. User menu . Layout of the user menu. Operating the user menu. Set-up. Setting the chimney fan output. Commissioning. ure-controlled regulation of exodraft supply air fan Use . Method of operation . Electrical connection . Sample wiring diagram. Connection of frequency converter/MPR relay . User menu. Operating the user menu. Set-up. Commissioning. | . 23 . 24 . 25 . 26 . 26 . 27 . 27 . 28 . 27 . 27 . 28 . 29 . 29 . 29 . 29 . 30 . 31 . 31 . 32 . 32 . 33 |
| | 3.3 3.4 3.4.1 3.4.2 3.5 3.5.1 3.5.2 3.6 3.6.1 3.7 Press 4.1 4.2 4.3 4.4 4.4.1 4.5 4.5.1 4.5 4.5.1 4.6 4.7 List o 5.1 | Electrical connection | . 23 . 24 . 25 . 26 . 26 . 27 . 27 . 28 . 27 . 27 . 28 . 29 . 29 . 29 . 29 . 30 . 31 . 31 . 32 . 33 . 33 |
| | 3.3 3.4 3.4.1 3.4.2 3.5 3.5.1 3.5.2 3.6 3.6.1 3.7 Press 4.1 4.2 4.3 4.4 4.4.1 4.5 4.5.1 4.6 4.7 List o 5.1 5.1.1 | Electrical connection | . 23 . 24 . 25 . 26 . 26 . 27 . 27 . 27 . 28 . 29 . 29 . 29 . 29 . 30 . 31 . 31 . 32 . 33 . 33 . 33 |
| | 3.3 3.4 3.4.1 3.4.2 3.5 3.5.1 3.5.2 3.6 3.6.1 3.7 Press 4.1 4.2 4.3 4.4 4.4.1 4.5 4.5.1 4.6 4.7 List o 5.1 5.1.1 5.1.2 | Electrical connection . Sample wiring diagrams . 1 x 2-stage boiler. 2 x 1-stage boilers. User menu. Layout of the user menu. Operating the user menu. Set-up. Setting the chimney fan output. Commissioning. ure-controlled regulation of exodraft supply air fan . Use Method of operation Electrical connection . Sample wiring diagram. Connection of frequency converter/MPR relay User menu. Operating the user menu. Set-up. Commissioning. f alarms and troubleshooting. Resetting a current alarm. Resetting a current alarm. Resetting the alarm log. | . 23 . 24 . 25 . 26 . 26 . 27 . 27 . 27 . 27 . 27 . 27 . 27 . 27 |
| | 3.3 3.4 3.4.1 3.4.2 3.5 3.5.1 3.5.2 3.6 3.6.1 3.7 Press 4.1 4.2 4.3 4.4 4.4.1 4.5 4.5.1 4.6 4.7 List o 5.1 5.1.1 5.1.2 5.1.3 | Electrical connection . Sample wiring diagrams . 1 x 2-stage boiler. 2 x 1-stage boilers. User menu. Layout of the user menu. Operating the user menu. Set-up. Setting the chimney fan output. Commissioning. ure-controlled regulation of exodraft supply air fan Use Method of operation Electrical connection . Sample wiring diagram. Connection of frequency converter/MPR relay. User menu. Operating the user menu. Set-up. Commissioning. f alarms and troubleshooting. Alarm handling. Resetting a current alarm. Resetting a current alarm. Resetting the alarm log. Alarm overview. | . 23 . 24 . 25 . 26 . 26 . 27 . 27 . 27 . 27 . 27 . 27 . 27 . 27 |
| | 3.3 3.4 3.4.1 3.4.2 3.5 3.5.1 3.5.2 3.6 3.6.1 3.7 Press 4.1 4.2 4.3 4.4 4.4.1 4.5 4.5.1 4.6 4.7 List o 5.1 5.1.1 5.1.2 5.1.3 5.2 | Electrical connection . Sample wiring diagrams . 1 x 2-stage boiler. 2 x 1-stage boilers. User menu. Layout of the user menu. Operating the user menu. Set-up. Setting the chimney fan output. Commissioning. ure-controlled regulation of exodraft supply air fan. Use . Method of operation Electrical connection Sample wiring diagram. Connection of frequency converter/MPR relay User menu. Operating the user menu. Set-up. Commissioning. falarms and troubleshooting. Alarm handling. Resetting a current alarm. Resetting a current alarm. Resetting the alarm log. Alarm overview. More troubleshooting. | . 23 . 23 . 24 . 25 . 26 . 26 . 27 . 27 . 27 . 28 . 29 . 29 . 29 . 29 . 30 . 31 . 31 . 32 . 33 . 33 . 33 . 35 |
| | 3.3 3.4 3.4.1 3.4.2 3.5 3.5.1 3.5.2 3.6 3.6.1 3.7 Press 4.1 4.2 4.3 4.4 4.4.1 4.5 4.5.1 4.6 4.7 List o 5.1 5.1.1 5.1.2 5.1.3 5.2 5.2.1 | Electrical connection . Sample wiring diagrams . 1 x 2-stage boiler . 2 x 1-stage boilers . User menu . Layout of the user menu. Operating the user menu. Set-up Setting the chimney fan output. Commissioning . ure-controlled regulation of exodraft supply air fan . Use . Method of operation . Electrical connection . Sample wiring diagram. Connection of frequency converter/MPR relay. User menu. Operating the user menu. Set-up. Commissioning. f alarms and troubleshooting . Alarm handling. Resetting a current alarm. Resetting the alarm log. Alarm overview . More troubleshooting . Program running. | . 23 . 24 . 25 . 26 . 26 . 27 . 27 . 28 . 29 . 29 . 29 . 29 . 30 . 31 . 31 . 32 . 33 . 33 . 33 . 33 . 35 . 35 |
| | 3.3 3.4 3.4.1 3.4.2 3.5 3.5.1 3.5.2 3.6 3.6.1 3.7 Press 4.1 4.2 4.3 4.4 4.4.1 4.5 4.5.1 4.6 4.7 List o 5.1 5.1.1 5.1.2 5.1.3 5.2 | Electrical connection . Sample wiring diagrams . 1 x 2-stage boiler. 2 x 1-stage boilers. User menu. Layout of the user menu. Operating the user menu. Set-up. Setting the chimney fan output. Commissioning. ure-controlled regulation of exodraft supply air fan. Use . Method of operation Electrical connection Sample wiring diagram. Connection of frequency converter/MPR relay User menu. Operating the user menu. Set-up. Commissioning. falarms and troubleshooting. Alarm handling. Resetting a current alarm. Resetting a current alarm. Resetting the alarm log. Alarm overview. More troubleshooting. | . 23 . 24 . 25 . 26 . 26 . 27 . 27 . 28 . 29 . 29 . 29 . 29 . 30 . 31 . 31 . 32 . 33 . 33 . 33 . 33 . 35 . 35 |
| | 3.3 3.4 3.4.1 3.4.2 3.5 3.5.1 3.5.2 3.6 3.6.1 3.7 Press 4.1 4.2 4.3 4.4 4.4.1 4.5 4.5.1 4.5 4.5.1 4.6 4.7 List o 5.1 5.1.2 5.1.3 5.2 5.2.1 5.2.2 | Electrical connection . Sample wiring diagrams . 1 x 2-stage boiler . 2 x 1-stage boilers . User menu . Layout of the user menu. Operating the user menu. Set-up. Setting the chimney fan output. Commissioning. ure-controlled regulation of exodraft supply air fan . Use . Method of operation . Electrical connection . Sample wiring diagram. Connection of frequency converter/MPR relay User menu. Operating the user menu. Set-up. Commissioning. f alarms and troubleshooting. Alarm handling. Resetting a current alarm. Resetting a current alarm. Resetting a current alarm. Resetting the alarm log. Alarm overview. More troubleshooting . Program running. Communication error | . 23 . 24 . 25 . 26 . 26 . 27 . 27 . 28 . 29 . 29 . 29 . 29 . 30 . 31 . 31 . 31 . 32 . 33 . 33 . 33 . 35 . 35 |
| 5. | 3.3 3.4 3.4.1 3.4.2 3.5 3.5.1 3.5.2 3.6 3.6.1 3.7 Press 4.1 4.2 4.3 4.4 4.4.1 4.5 4.5.1 4.6 4.7 List o 5.1 5.1.2 5.1.3 5.2 5.2.1 5.2.2 Techn | Electrical connection . Sample wiring diagrams . 1 x 2-stage boiler . 2 x 1-stage boilers . User menu . Layout of the user menu. Operating the user menu. Set-up Setting the chimney fan output. Commissioning . ure-controlled regulation of exodraft supply air fan . Use . Method of operation . Electrical connection . Sample wiring diagram. Connection of frequency converter/MPR relay. User menu. Operating the user menu. Set-up. Commissioning. f alarms and troubleshooting . Alarm handling. Resetting a current alarm. Resetting the alarm log. Alarm overview . More troubleshooting . Program running. | . 23 . 24 . 25 . 26 . 26 . 27 . 28 . 29 . 29 . 29 . 30 . 31 . 31 . 32 . 33 . 33 . 33 . 33 . 35 . 35 . 36 |

Symbol Legend:

The following terms are used throughout this manual to bring attention to the presence of potential hazards or to important information concerning the product.



 \bigcirc

Failure to observe instructions marked with a prohibition symbol may result i serious injury or death.

Danger symbol:




Failure to observe instructions marked with a danger symbol may result in personal injury and/or damage to the unit.



TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:

- Use this unit in the manner intended by the manufacturer. If you have questions, contact the supplier at the address or telephone number listed on the back of the manual.
- Before servicing or cleaning the unit, switch off at service panel and lock service panel to prevent power from being switched on accidentally.
- Installation work and electrical wiring must be done by a qualified person(s) in accordance with applicable codes and standards.
- Follow the appliance manufacturer's guidelines and safety
- · standards and the local code authorities
- This unit must be grounded.





1. **Product information**

Description

The EBC22 (**exodraft** Boiler Control) is a specially designed control component for constant pressure regulation of chimney draft. EBC is specially designed to comply with the Gas Application Directive.

By changing the operating mode, the EBC22 can also:

0

- Act as a 2-stage speed regulator (see section 3)
- Control the supply of fresh air to the boiler room (see section 4)
- Automatically start/stop via a temperature sensor in the chimney duct

Layout of the instructions

The EBC22 can control an **exodraft** chimney fan or an **exodraft** supply air fan.

There are seven sections to the instructions:

- Read section 1. "Product information"
 - Read the section that deals with the required control methods:
 - Section 2: Pressure-controlled regulation of exodraft fans (factory-set)
 - Section 3: Two-step speed regulation of exodraft fans
 - Section 4: Pressure-controlled regulation of **exodraft** supply air fan
- Read sections 5–7.

Section 2,3, and 4 deal with the following:

Section 2:

- Pressure-controlled regulation of **exodraft** chimney fans (default).
- The EBC22 ensures and monitors constant pressure in a chimney.
- The EBC22 is designed for use with boiler systems with 1- and 2-stage burners.
- The EBC22 can also be used for boiler systems with modulating burners.
- The control system monitors chimney draft and shuts down the burner in the event of errors (the alarmdiode on the EBC22 will turn on).
- The control system is intended for both solid fuel boilers, atmospheric gas boilers, condens and forced draft boilers for oil and gas.
- The EBC22 can control a chimney fan directly or indirectly via a frequency converter.

Section 3:

- 2-stage speed regulation of **exodraft** chimney fans.
- The EBC22 can be used as a 2-stage speed regulator for **exodraft** chimney fans.
- The EBC22 monitors chimney draft and shuts down the burner in the event of errors (the alarmdiode on the EBC22 will turn on).
- The control system is intended for 1- or 2-stage atmospheric gas boilers.
- The EBC22 can control a chimney fan directly or indirectly via a frequency converter.


Section 4: 🞯


- Pressure-controlled regulation of **exodraft** supply air fans.
- The EBC22 can be used to control an **exodraft** BESB or BESF box fan.
- The EBC22 ensures and monitors constant pressure in a boiler room.
- The control system monitors the pressure in the boiler room and shuts down the burner in the event of errors (the alarmdiode on the EBC22 will turn on).
- The EBC22 can control a supply air fan directly or indirectly via a frequency converter.

Product information • 5

1.1 Delivery



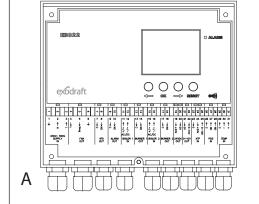

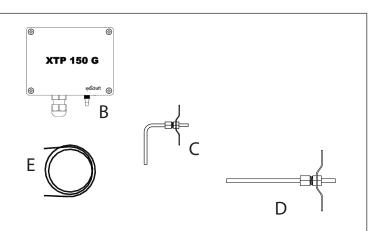

| Pos. | Part | ltem no. | Function |
|------|----------------------------------|-----------|---|
| А | EBC22 | EBC22EU01 | Controls exodraft fans and chimney fans. For indoor installations. |
| | | EBC22EU02 | Controls exodraft fans and chimney fans. For outdoor installations. |
| В | Pressure transducer (XTP) | XTP150G | Measures difference air pressure in the boiler room or chimney, or outdoor atmospheric pressure. |
| С | Measuring probe for EBC22EU01 | 3200814 | Measures pressure in the chimney. (EBC22EU01) |
| D | Measuring probe for EBC22EU02 | 3200484 | Measures pressure in the chimney. (EBC22EU02) |
| E | 2 m silicone hose | 2000335 | Supplies the pressure transducer (XTP) with reference pressure from the measuring probe or from outdoors. |
| | Instructions | 3110009 | Instructions for fitting, installation and operation. |

1.2 Accessories

| Part | ltem no. | Function |
|-----------------------|----------|--------------------------------------|
| Temperature sensor | 1100755 | Measures the temperature |
| Relay box | ES12 | If more than 2 boilers are connected |

1.3 Fitting

1.3.1 Cable length


Max. cable length between EBC22 and XTP: 100 m. Max. cable length between EBC22 and chimney fan / fan: 100 m



1.3.2 Connection diagram

The EBC22 is to be fitted and connected as shown in the diagram below.

С

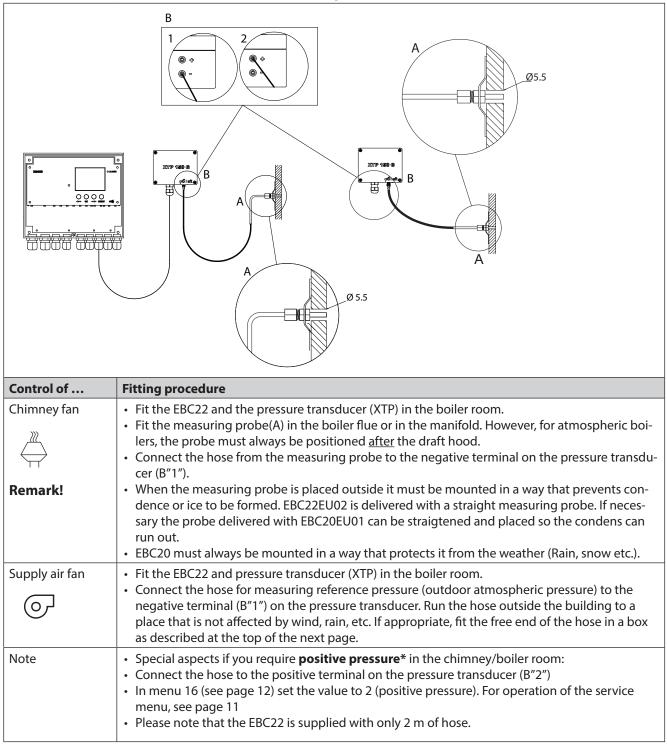


NB!

*The default setting of the EBC22 is for negative pressure regulation, but local authority requirements may state that positive pressure must be maintained.



The pressure transducer cannot be mounted inside an air tight enclosure. It uses the atmospheric pressure as reference pressure.

Make sure to position the pressure transducer the right way up.



Outdoor fitting of the pressure transducer (XTP)

If there is a risk of adverse effect from strong winds, the hose (A) located inside the XTP 150G can be removed from the (+) valve.


If the pressure transducer is positioned in a place where insects have access to the free end, fitting a sinter filter is recommended.




Do not blow into the valves on the XTP 150 G

1.4 Layout of the user interface

1.4.1 Panel

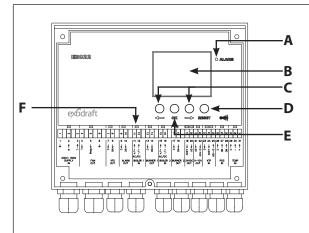

| Pos. | Part | Function |
|------|-----------------------|--|
| А | Alarm | indicates alarms |
| В | Display | displays operation and changes in the user interface (menu system) indicates alarms shows normal operation status |
| С | and | forward or back in the menu systemincrease/reduce set point |
| D | RESED | reset alarmreturn to operation screen |
| E | <u>OK</u> | select menu item confirm/save change of set point (must be confirmed with OK (the current set point blinks rapidly) and is saved using OK within 5 seconds (or the setting will not be saved) |
| F | Light emitting diodes | shows status of inputs and outputs |

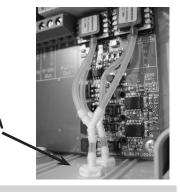





1.4.2 Light emitting diodes and terminal board

The chart below lists the connection options for the terminal boards and explains the various colours of the light emitting diodes.


| • | • | • • • • | • • • • • • • • • • | | | | |
|---|---|--|--|--|--|--|--|
| - 2 | ~ σ τ 4 ω | 8 9 10 11 12 13 | 31 30 29 28 28 28 28 28 28 28 29 20 20 20 19 19 11 15 | | | | |
| 1 2 ↓ ↑ Z 230V~ 50Hz SUPPLY IN | 3 4 5 6 7 ↑ ↓ ↓ ↓ ↓ ¬ ¬ ¬ ¬ ¬ ¬ ¬ ¬ ¬ ¬ ¬ ¬ ¬ ¬ ¬ ¬ ¬ ¬ ¬ | $\begin{array}{c} \downarrow \\ \neg \\$ | $\begin{array}{c ccccccccccccccccccccccccccccccccccc$ | | | | |
| No. | Designation | Max. load | Meaning when the light diode is | | | | |
| 1, 2 & 3 | SUPPLY IN | 230-240 V AC +/- 10 % | green: the EBC22 is connected to a power supply | | | | |
| 4,5&6 | FAN OUT | 3 A | green: the triac output is active | | | | |
| 7 & 8 | VFD OUT | 250 V AC, 8 A, AC 3 green: the relay is connected | | | | | |
| 9 & 10 | ALARM OUT | 250 V AC, 8 A, AC 3 | red: the relay is open | | | | |
| 11 & 12 | BOILER 1 IN | 18 - 230 V DC / V AC | green: the input is active | | | | |
| 13 & 14 | BURNER 1 OUT | 250 VAC, 4 A, A C 3 | green: the relay is connected | | | | |
| 15 & 16 | BOILER 2 IN | 18 V DC/230 V AC | green: the input is active | | | | |
| 17 & 18 | BURNER 2 OUT | 250 V AC, 4 A, AC 3 | green: the relay is connected | | | | |
| 19 & 20 | 24 VDC OUT | 100 mA | green: power supply OK red: overload | | | | |
| 21 & 22 | 0 - 10 V OUT* | 20 mA | green: the output is active | | | | |
| 23, 24 & 25 | XTP IN | | green: XTP connected red: return voltage >12 V DC | | | | |
| 26, 27 & 28 | PDS IN ** | | green: C & NO are connected | | | | |
| 29, 30 & 31 | TEMP IN | | green: temperature sensor connected | | | | |

* Cable length between 0-10 V output (terminal 21 & 22) must not exceed 100 m and must be of a shielded cable 3 x 0,75 mm^{2.}

** Terminals 26, 27 & 28 can however also be used for connecting other auxiliary surveillance equipment.

1.4.3 Display

The diagram below shows the layout of the display on the EBC22. All possible display values are stated:

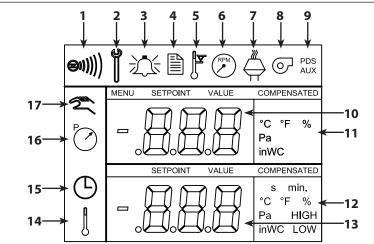

| Pos. | Shows |
|------|--|
| 1 | Symbol indicating the connection of Z-wave |
| 2 | Symbol for service menu |
| 3 | Symbol for alarms. Displayed in the event of an alarm, along with the illumination of the alarm diode. |
| 4 | Symbol for the operational settings of the service menu (see section 1.6) and the alarm log. |
| 5 | Symbol for overheating |
| 6 | Symbol for 2-stage speed regulation of exodraft chimney fan |
| 7 | Symbol for pressure-controlled regulation of exodraft chimney fan |
| 8 | Symbol for pressure-controlled regulation of exodraft supply air fan |
| 9 | Symbol indicating: • PDS error • PDS check (flashing) |
| 10 | Operation screen: current pressure Menu screen: current menu |
| 11 | Units |
| 12 | Units |
| 13 | Menu screen ("VALUE" and, in some cases, "SETPOINT" displayed): Setpoint for the menu item in question |
| 14 | Temperature symbol, indicates: • Operation screen: current temperature • Menu screen: temperature parameter setting |
| 15 | Timer indicator |
| 16 | Pressure symbol indicating that: Operation screen: Pos. 10 is displaying pressure Menu screen: You are currently altering a pressure parameter |
| 17 | Symbol for commissioning |



1.5 Introduction to the user interface

Display

The purpose of the display (see previous page) is to present:

- Operating information (pressure, etc.)
 - Alarms
 - Setpoints
 - Parameters

Menu structure

The menu system in the EBC22 contains:

- User menu (for operation by daily users).
- Service menu (for operation by qualified technical staff).

Layout of the user interface

The user interface is operated through four buttons with the following functions:

| Button | Function |
|-----------|---|
| <u>OK</u> | Activate the user menu Edit and save settings Activate service menu (press and hold for 3 seconds) |
| and | Go to menu item, and adjust value |
| (EEE) | Return to operation screen from any point in the menu system Reset alarm when manual reset is selected in menu 25, see page 12 |

1.6 Set-up

1.6.1 Setting the chimney draft

To set the pressure in the chimney, follow the procedure detailed below

| Step. | Action | The display shows |
|-------|--|-----------------------------------|
| 1 | Start the heating system. The EBC22 displays the actual pressure (in this example 30 Pa). | VALLE PO |
| 2 | • Briefly press OK to enter the user menu. | PO SETPONT Pa |
| 3 | Press OK Press and until the required pressure appears in the lower display. | PO MENU SETPONT Pa Pa |

| 4 | Press OK to confirm the setting (the display blinks faster) | MENU MENU SETPORY SETPORY Pa |
|---|---|--|
| 5 | • Within 5 seconds, press OK again, to save the set pressure (35 Pa in this example). | PC SETPONT SETPONT Pa |
| 6 | To finish and return to the operation screen, press . | |

NB

This procedure only applies to setting up the chimney draft. If you wish to:

- Set the EBC22 up for 2-stage speed regulation of a chimney fan, see page 23
- Set the EBC22 up for pressure control of a supply air fan, see page 29


1.7 Service menu

The service menu is only to be operated by qualified staff.

For an overview of the **service menu**, see page 12 - 13 Operation of the **user menus** is described in sections 2, 3 and 4.

Navigation in the service menu

• To activate the service menu, press and hold OK for 3 seconds



Operation is carried out using the buttons as described above.

- The upper display (pos. 10 on page 9) presents the number of the menu, with the set point for this menu being shown in the lower display (pos. 13 on page 9).
- Menus whose last digit is "0" are exit menus. These are used to navigate one level back. To do so, press OK
- To activate the editing options for a menu item, press (OK). The set point will start flashing.
- Confirm selection with OK
- Save by pressing (OK) again within 5 seconds.
- To exit the service menu, press (ESE). This will take you back to the operation screen. Alternatively, you can navigate back one level at a time if you wish to set multiple menu items.

For examples of how to use the service menu, see 1.7.2 on page 14



1.7.1 Overview of the service menu

The service menu is built up in four levels:

| | | | | | ettings fo pplicati | |
|-------------------------|-------------------------------|------------------------|--|------------|------------------------|--------------|
| Menu level 1 | Menu level 2 | Menu level 3 | Function | Default | RPM | Ø |
| 0 Exit Service menu | | | Return to operation screen | | | |
| 1 Operation settings | 10 Exit operation settings | | | | | |
| settings | 11 Operating mode | | Setting of control/operating function 1 = Pressure-controlled regulation 2 = 2-stage speed regulation 3 = Supply air regulation | 1 | | |
| | 12 °C/°F | | Select measuring unit for temperature $1 = °C$, $2 = °F$ | 1 (°C) | 1 (°C) | 1 (°C) |
| | 13 Pa / inWC | | Measuring unit for pressure: 1 = Pa, 2 = inWC | 1 (Pa) | 1 (Pa) | 1 (Pa) |
| | 14 Software versions | 140 Exit | | | | |
| | | 141 Controller version | View Controller software version | x.xx | x.xx | x.xx |
| | | 142 Safety version | View Safety software version | x.xx | x.xx | x.xx |
| | | 143 Display version | View Display software version | x.xx | x.xx | x.xx |
| | 15 Select XTP measurement | 150 Exit | | | | - |
| | range | 151 Set Low XTP value | from -500 Pa to 0 Pa | 0 Pa | N/A | 0 Pa |
| | | 152 Set High XTP value | from 0 Pa to 500 Pa | 150 Pa | N/A | 150 Pa |
| | 16 Positive/negative pressure | | 1 = negative pressure 2 = positive pressure | 1 | N/A | 1 |
| | 17 OEM functions | 170 Exit | | | | |
| | | 171 Cooker function | Switch Cooker function ON and OFF | N/A | OFF | N/A |
| | 18 Reset to defaults | | Reset to defaults. If you select "YES", a 10-second countdown will start, during which you can cancel your choice by pressing any button. | NO | NO | NO |
| 2 Alarm | 20 Exit Alarm | | | | | |
| | 21 Alarm Log | 210 Exit | | | | |
| | | 211-219 | The 9 most recent alarms | | | |
| | 22 Reset alarm log | | Resets alarm log | NO | NO | NO |
| | 23 Flow Alarm limit | | Set Flow Alarm limit in %: | 64% | N/A | 300% |
| | 24 Flow Alarm delay | | Set Flow Alarm delay, 10–60 s | 15 s | 15 s | 15 s |
| | 25 Reset auto / manual | | 1 = automatic, 2 = manual | 1 Auto) | 1 (Auto) | 11 (Auto) |

| | | | | | ettings fo applicatio | |
|-----------------|----------------------|-------------------------------|--|----------|--------------------------|----------|
| Menu level 1 | Menu level 2 | Menu level 3 | Function | Default | RPM | Ø |
| 3 Configuration | 30 Exit settings | | | | | |
| | 31 PDS/AUX config | | 1 = PDS, 2 = C-NO | 2 (C-NO) | 1 (PDS) (Locked) | 2 (C-NO) |
| | 32 Triac settings | 320 Exit | | | | |
| | | 321 Umin | Min. output voltage in % of 230V AC, 35-100% | 35% | N/A | 35% |
| | | 322 Umax | Max. output voltage in % of 230V AC, 35-100% | 100% | N/A | 100% |
| | 33 0–10V settings | 330 Exit | | | | |
| | | 331 Umin | Min. output voltage in % of 10V DC, 0-100% | 0% | N/A | 0% |
| | | 332 Umax | Max. output voltage in % of 10V DC, 0-100% | 100% | N/A | 100% |
| | 34 Manual Fan mode | 340 Exit | | | | |
| | | 341 Manual Fan mode on/off | Switch Manual Fan mode on and off | OFF | OFF | OFF |
| | | 342 Manual Fan mode speed | Set the motor manually, 35–100% | 35% | 35% | 35% |
| | 35 Regulation parame | eters 350 Exit | | | | |
| | | 351 Amplification Xp | Set proportional amplification, 0.2 to 5 | 2,2 | N/A | 1,2 |
| | | 352 Integration time Ti | Set integration time from 1 to 30 s | 5 | N/A | 3 |
| | | 353 Differential time Td | Set differential time from 1 to 30 s | 1 | N/A | 5 |
| | | 354 Sample time | Set sample time from 1 to 999 ms | 300 ms | N/A | 300 ms |
| 4 Temp. sensor | 40 Exit Temp. sensor | | | | | |
| | 41 Sensor ON/OFF | | turn temperature sensor ON/OFF | OFF | | OFF |
| | 42 Auto Start/Stop | 420 Exit | | | | |
| | | 421 ON/OFF | turn temperature sensor ON/OFF | OFF | | OFF |
| | | 422 Start temperature | select start temperature in 5-450 °C range | 40 °C | | 40 °C |
| | | 423 Stop temperature | select stop temperature in 0-445 °C range | 35 °C | | 35 °C |
| | 43 Forced operation | 430 Exit | | | | |
| | | 431 ON/OFF | turn forced operation ON/OFF | OFF | | OFF |
| | | 432 Limit temperature | select temperature limit in 5-450 °C range | 250 °C | | 50 °C |
| | 44 Alarm | 440 Exit | | | | |
| | | 441 ON/OFF | turn alarm ON/OFF | OFF | | OFF |
| | | 442 Limit temperature | select temperature limit in 25–450 °C range | 450 °C | | 450 ℃ |
| | | 443 Alarm delay | Select delay-length of limit temperature alarm: 0–60 second range | 5 | | 5 |



Important: Menu 4 must only be used for solid fuel!



1.7.2 Changing between the operating functions ($\stackrel{\mathbb{M}}{\frown}$ - $\stackrel{\mathbb{O}}{\bigcirc}$)

Default operating function

As its base function, the EBC22 is factory set to pressure-controlled regulation of **exodraft** chimney fans (operating function 1 / 2)

How to change the operating function

| Step | Action | The display shows |
|------|---|---|
| 1 | • Press and hold OK for 3 seconds | |
| 2 | Press to go to menu 1. Press OK to go to menu 10. | |
| 3 | Press to go to menu 11 Press OK | MENA MENA SETPONY |
| 4 | Press Image: the symbol and number for the operating function you require is displayed. The three operating functions are: 1 Pressure-controlled regulation of exodraft chimney fans (default) 2 2-stage speed regulation of exodraft chimney fans 3 Pressure-controlled regulation of exodraft supply air fan | symbol is changed |
| 5 | • Press OK to confirm selection (the display blinks faster) | MENU MENU SETPOINT |
| 6 | Within 5 seconds, press OK again, to save selection. (display stops blinking). | MEND MEND SETPOINT |
| 7 | To finish and return to the operation screen, press (| VALUE |

2. Pressure-controlled regulation of the chimney fan

2.1 Use

Area of use

- The EBC22 is designed for use with boiler systems with 1- and 2-stage burners.
- The EBC22 can also be used for boiler systems with modulating burners.
- The EBC22 can also be used for multiple boiler systems
- The control system is intended for:
 - solid fuel boilers,
 - atmospheric gas boilers
 - forced draft boilers for oil and gas
 - condensing boilers.
- The EBC22 can control a chimney fan directly or indirectly via a frequency converter.

2.2 Method of operation

General function

- The control system monitors chimney draft and disconnects the burner in the event of errors (the alarmdiode on the EBC22 will turn on).
- When the boiler thermostat demands heat, the chimney fan will start at max. voltage, the burner start is delayed
- When the EBC22 registers sufficient chimney draft, the burner is released.
- The EBC22 maintains the set pressure by regulating the voltage. The pressure is shown in the display.
- In the event of an insufficient pressure the burner will be disconnected after 15 seconds. "Insufficient pressure" is less than 64% of the set value, corresponding less than 80% flow.
- When the boiler switches off, the chimney fan is also stopped. However, it is possible to set a post-purge period for the chimney fan (see page 21). Alternatively, the control system can be set up to keep the chimney fan running continuously (see page 19).

Light emitting diodes and output signals

All inputs and outputs are linked to light emitting diodes for the monitoring and service of the system (1.4.2 Light emitting diodes and terminal board, page 8).

The EBC22 has 0–10V output signals for controlling multiple chimney fans via frequency converters or motor power relays.

2.3 Electrical connection



This work must be performed by a qualified electrical engineer, in accordance with locally applicable rules and legislation.



The installation of the supply cable must be carried out in accordance with applicable regulations and legislation.

The earth terminal (____) must always be connected.

When connecting pressure transducer (XTP) and frequency converter, screened cable must be used.



Isolation switch

exodraft stresses that according to EU's Machinery Directive an isolation switch <u>must</u> be set up in the fixed installation.

The isolation switch is not supplied by **exodraft**. Available as an extra.




2.4 Sample wiring diagrams

As a constant pressure regulator for **exodraft** chimney fans, the EBC22 can be connected to a range of different signals. The following pages are sample wiring diagrams, and show the following:

- 2.4.1 Single- or two boiler application, page 17
- 2.4.2 Single boiler application with potential free contact in boiler, page 18
- 2.4.3 2 boiler application with continuous operation of chimney fan, page 19
- 2.4.4 Solid fuel boiler with temperature sensor, page 20

Contact the boiler manufacturer for details of correct connection of the boiler control system.


2.4.1 Single- or two boiler application

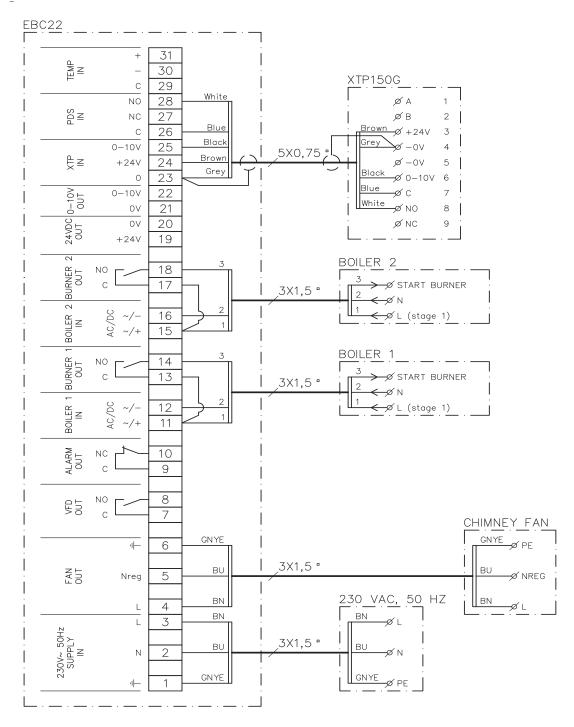


This example shows how to connect a voltage signal (10–230V AC/DC) for the EBC22 to start/stop the fan from one or two independent boilers:

- Connect the supply voltage to terminals 1–3
- Connecting the boilers:
 - Connect the burner start signal (L) to terminal 11 & 15
 - Connect the neutral wire to terminal 12 & 16
 - The start signal for the burner is sent from terminal 14 & 18
- Loop terminals 11 and 13
- Loop terminals 15 and 17
- Connect the chimney fan to terminals 4-6
- Connect the pressure transducer (XTP) to terminals 23–28





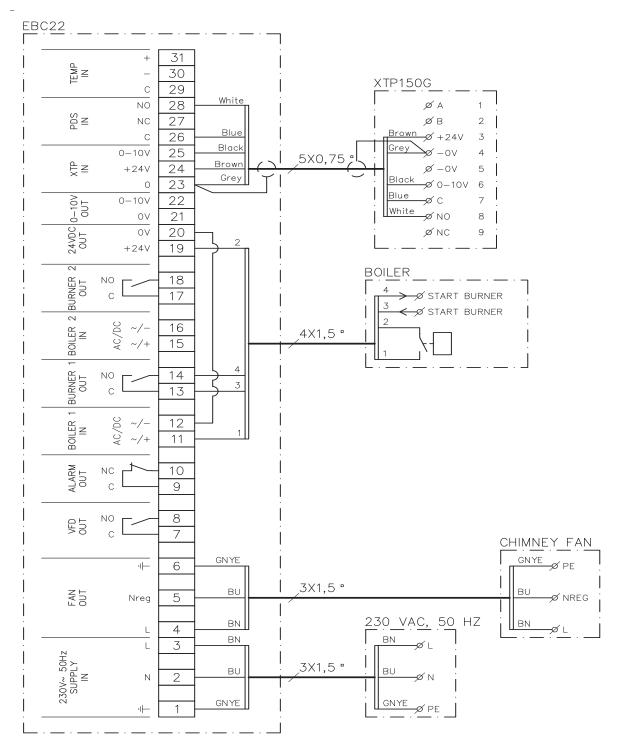


2.4.2 Single boiler application with potential free contact in boiler

This example shows how to connect a potential free contact to the EBC22 to start/stop the fan:

- Connect the supply voltage to terminals 1–3.
 - Connection to the boiler:
 - Connect the potential free contact to terminals 11 & 19.
 - Loop terminals 12 & 20.
- Connect the burner start signal to terminals 13 & 14.
- Connect the chimney fan to terminals 4–6.
- Connect the pressure transducer (XTP) to terminals 23–28.

2.4.3 2 boiler application with continuous operation of chimney fan

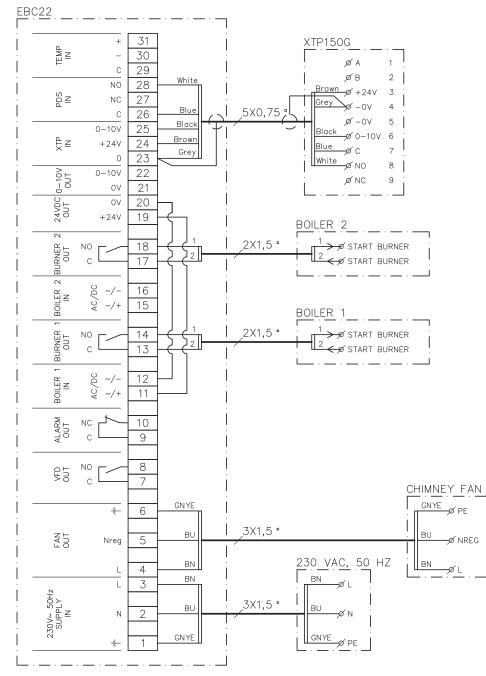

This example shows how to connect the EBC22 if you require continuous operation of the chimney fan from one or two boilers:

- Connect the supply voltage to terminals 1–3.
- Loop terminals 11 & 19.
- Loop terminals 12 & 20.


٠

- Connection to boiler (example with 2 boilers):
 - Connect the boiler 1 start signal to terminals 13 & 14.
 - Connect the boiler 2 start signal to terminals 17 & 18.
 - Connect the chimney fan to terminals 4–6.
- Connect the pressure transducer (XTP) to terminals 23–28.



2.4.4 Solid fuel boiler with temperature sensor

Showing how a fan is started and stoped via a temperature sensor in the flue duct.

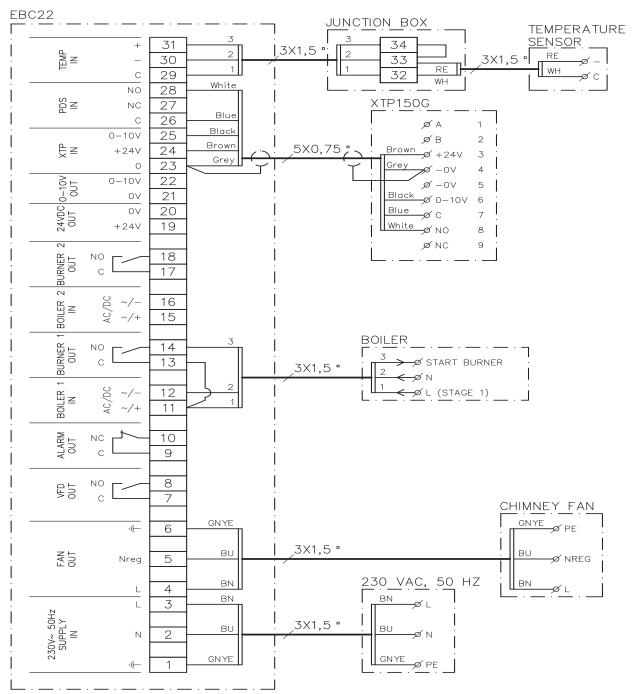

Example showing how a fan start/stop temperature sensor is connected to the EBC22.

- Connect the supply voltage to terminals 1–3
- Connecting the boiler:
 - Connect the burner start signal (L) to terminal 11.
 - Connect the neutral wire to terminal 12.
 - Loop terminals 11 and 13.
 - The start signal for the burner is sent from terminal 14
- Connect the fan to terminals 4-6.
- Connect the pressure transducer (XTP) to terminals 23–28.
- Connect the temperature sensor through a junction box to terminals 29-31

2.5 User menu

2.5.1 Layout of the user menu

The user menu consists of a single level and provides access to 4 parameters:

| Menu | Function | Range |
|------|---|--|
| 1 | Setting the required pressure | Depending on the XTP-range set in menus 151 and 152 |
| 2 | Setting pre-purge period | 0-999 s |
| 3 | Setting post-purge period | 0-60 min |
| 4 | Displaying current alarm (see alarm overview page 34) | - |

When the instructions refer to the menu numbers 1,2,3 and 4 it is understood that these numbers refer to the user menus.

2.5.2 Operating the user menu

Adjust the set point for user menu items 1–4 in the same way as shown in the example in page 10 To operate menu items 1–4, use the buttons as follows:

| Step | Press | То |
|------|---------------------------|--|
| 1 | <u>OK</u> | Activate the user menu |
| 2 | and $$ | Go to the menu item you wish to edit |
| 3 | <u>OK</u> | Edit the menu item selected |
| 4 | \bigcirc and \bigcirc | Adjust the required set point |
| 5 | <u>OK</u> | Confirm the required set point |
| 6 | OK | To save the required set point: Press OK again within 5 seconds |
| 7 | RESED | Return to operation screen. NB: If you do not press (ESE) the EBC22 will automatically return to the operation screen after 30 seconds |

You can <u>always</u> undo an action (that you have not confirmed by pressing OK) and return to the operation screen by pressing RESE).

Alarms

For alarm handling (menu 4), see page 33

2.6 Set-up

For setting up the EBC22, see section 1.6 Set-up, page 10



2.7 Commissioning

Commissioning on the EBC22 must be carried out to ensure a correct draft from the system.



Commissioning should be carried out by staff with the appropriate training, and with the authorisation to do so according to local legislation.

Do as follows:

| Step | Action | |
|------|---|--|
| 1 | Provisional draft setting (negative pressure): | |
| | Press OK to go to Menu 1. | |
| | Press OK | |
| | • Press or or until the negative required pressure appears in the display. | |
| | Press OK to confirm the set point. | |
| | • To save the set point: Press OK again within 5 seconds. | |
| | Press (ESE) to return to the operation screen. | |
| 2 | Start the system. Wait until the boiler starts and the draft has stabilised. The current draft will be shown in the display. | |
| 3 | Final adjustment of draft: Check the draft on the boiler. If draft is not correct, repeat the procedure from step 1. | |
| 4 | Check that the monitoring system shuts off the boiler. To simulate an error situation, disconnect the hose from the pressure transducer (XTP). Burner is switched off (diode switches off) and the alarm diode illuminates. | |
| 5 | After completing the commissioning, check the start-up function by restarting the system. | |

For the set point values, please refer to the data for the boiler in question. However, the following values can be considered typical:

- Boilers with forced draft: typically 20–30 Pa
- Boilers with atmospheric burners: typically 5–10 Pa

Set up according to site conditions can be determined by boiler commisioning engineer

3. 2-stage speed regulation of exodraft chimney fan

3.1 Use

Area of use

- The EBC22 can be used as a 2-stage speed regulator for an **exodraft** chimney fan.
- The control system is intended for 1- or 2-stage atmospheric gas boilers.
- The EBC22 can control a chimney fan directly or indirectly via a frequency converter.

3.2 Method of operation

General function

- The EBC22 monitors chimney draft and disconnects the boilers in the event of errors (the alarmdiode on the EBC22 will turn on).
- When the boiler thermostat demands heat, the chimney fan will start at max. voltage.
- When the monitoring system measures sufficient chimney draft, the burner is released, and voltage to the chimney fan is regulated according to the setpoint for stage 1 (LOW).
- When stage 2 (HIGH) is activated, the EBC22 regulates the voltage to the chimney fan according to the set point for stage 2.
- It is possible to set pre-purge and post-purge periods for the chimney fan.
- In the event of insufficient draft, the burner will be disconnected after 15 seconds. "Insufficient draft" is draft less than the value set on the PDS during commissioning.

Step-up function

- The step-up function in the EBC22 prevents unintentional disconnection of the system on account of changes in wind and weather conditions.
- The step-up function performs a stepped increase of the voltage as a result of protracted draft errors. In principle, this can be repeated until maximum voltage has been reached.

3.3 Electrical connection



This work must be performed by a qualified electrical engineer, in accordance with locally applicable rules and legislation.



The installation of the supply cable must be carried out in accordance with applicable regulations and legislation.

The earth terminal ($_$) must always be connected.

Isolation switch



exodraft A/S stresses that in accordance with EU's Machinery Directive an isolation switch must be set up in the fixed installation.

The isolation switch is not supplied by **exodraft**. Available as an extra.

3.4 Sample wiring diagrams

As a 2-stage speed regulator for **exodraft** chimney fans, the EBC22 can be connected to a range of different signals. The following sections contain two sample wiring diagrams showing:


3.4.1 1 x 2-stage boiler, page 24

3.4.2 2 x 1-stage boilers, page 25

exodraft recommends that you contact the boiler manufacturer for details of correct connection of the boiler control system.



3.4.1 1 x 2-stage boiler

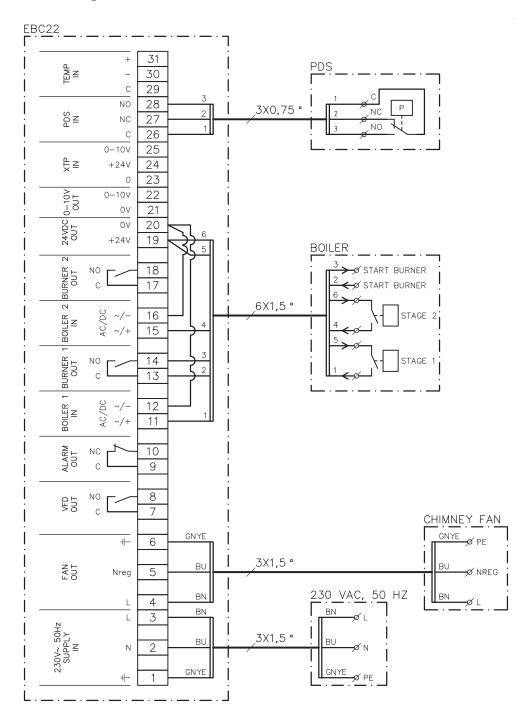

This example shows which inputs/outputs on the EBC22 need to be connected to a 2-stage boiler: The boiler outputs for stages 1 & 2 are two potential free contact sets.


Connect the supply voltage to terminals 1–3.

- Loop terminals 12 & 20.
- Loop terminals 16 & 20.
- Connection to the boiler:
 - Connect stage 1 (potential free contact) to terminals 11 and 19.
 - Connect stage 2 (potential free contact) to terminals 15 and 19.
 - Connect the burner start signal to terminals 13 & 14.
- Connect the chimney fan to terminals 4–6.
- Set the value in menu 31 to 1 (PDS connected).

NB: If ^{PDS}_{AUX} is flashing, the EBC22 is preparing for a PDS-check.

ion 🗸

3.4.2 2 x 1-stage boilers

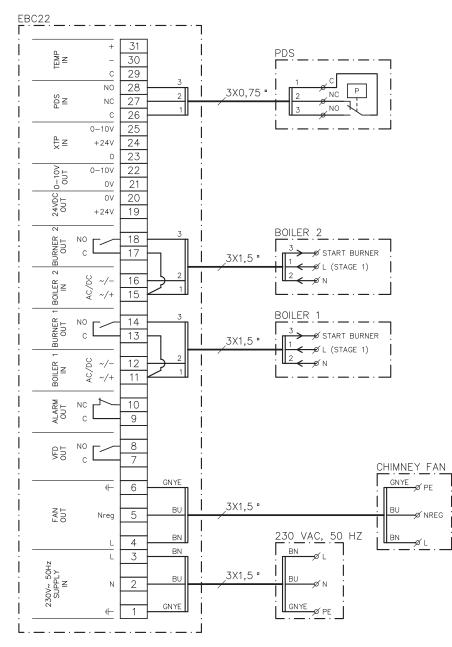

This example shows which inputs/outputs on the EBC22 need to be connected to 2 x 1-stage boilers. The boiler output for stage 1 is a voltage signal.

- Connect the voltage to terminals 1–3.
- Loop terminals 11 & 13.
- Loop terminals 15 & 17.

.

- Connection to the boilers:
 - The start signal for the burner from boiler 1 is connected to terminal 14.
 - Connect boiler 1 (N) to terminal 12.
 - Connect the start signal for boiler 1 (L) to terminal 11.
 - The start signal for the burner from boiler 2 is connected to terminal 18.
 - Connect boiler 2 (N) to terminal 16.
 - Connect the start signal for boiler 2 (L) to terminal 15.
 - Connect the chimney fan to terminals 4–6.
 - Adjust the value in menu 31 to 1 (PDS connected).

NB: If AUX is flashing, the EBC22 is preparing for a PDS-check.



3.5 User menu

3.5.1 Layout of the user menu

The user menu provides access to 5 functions:

| Menu | Function | Range |
|------|--|----------|
| 1 | Setting of the chimney fan output for stage 1 (LOW)35-100% | |
| 2 | Setting of the chimney fan output for stage 2 (HIGH) 35-100% | |
| 3 | Setting the pre-purge period for the chimney fan0-999 s | |
| 4 | Setting the post-purge period for the chimney fan | 0-60 min |
| 5 | Displaying current alarm (see alarm overview page 34) | - |

When the instructions refer to the menu numbers 1, 2, 3, 4 and 5 it is understood that these numbers refer to the user menus.

3.5.2 Operating the user menu

Setting up the operating function

Before you can use the EBC22 as a 2-stage speed regulator for **exodraft** chimney fans, you must change the operating function.

The procedure for setting up the operating function is described on page 14

Using the buttons

To operate menu items 1–5, use the buttons as follows:

| Step | Press | То |
|------|-----------|--|
| 1 | <u>OK</u> | Activate the user menu |
| 2 | and | Go to the menu item you wish to edit |
| 3 | <u>OK</u> | Edit the menu item selected |
| 4 | and | Adjust the required set point |
| 5 | <u>OK</u> | Confirm the required set point |
| 6 | 0K) | To save the required set point: Press OK again within 5 seconds |
| 7 | | Return to operation screen. NB: If you do not press (ESE) the EBC22 will automatically return to the operation screen after 30 seconds |

You can <u>always</u> undo an action (that you have not confirmed by pressing OK) and return to the operation screen by pressing RESE).

Adjust the set points for user menu items 1–4 as shown in the example on the following page.

Alarms

For alarm handling (menu 5), see page 33

3.6 Set-up

NB

Remember to set up the operating function of the EBC22 as described on page 14

3.6.1 Setting the chimney fan output

Use the following procedure to adjust the chimney fan output:

| Step. | Action | The display shows |
|-------|--|---|
| 1 | Press OK to go to menu 1. The output for stage 1 (LOW) will be displayed. | MERU SETPOINT LOW |
| 2 | • Press OK | MERU SETYCOM SETYCOM LOW |
| 3 | Press and until the output you require for stage 1 (LOW) (in this example 41%) is displayed. Press OK to confirm the set point Within 5 seconds, press OK again, to save the set point | MERU SETPOINT SETPOINT LOW |
| 4 | Only for <u>2-stage</u> systems: Press to go to menu 2 and the settings for stage 2 (HIGH). | MERU SETFORM SETFORM HIGH |
| 5 | Repeat steps 2–3 of the procedure, only this time use them to regulate stage 2. To finish, press (FFF). | VALUE |

NB

If you do not press any buttons for 30 seconds, the EBC22 will automatically switch back to the operation screen.



3.7 Commissioning

Commissioning must be carried out on the EBC22 to ensure a correct draft from the system.

Commissioning should be carried out by staff with the appropriate training, and with the authorisation to do so according to local legislation.

Do as follows:

| Step | Action | |
|------|--|--|
| 1 | Setting chimney fan stage 1 (LOW) | |
| | Press OK to go to Menu 1. | |
| | Press OK | |
| | Press or to set the "LOW" value to max (100%). | |
| | • Press OK to confirm the set point. | |
| | • To save the set point: Press OK again within 5 seconds. | |
| | Press RESED to return to the operation screen. | |
| 2 | Start the system on stage 1. | |
| 3 | Wait until the PDS is connected (PDS diode lights green). | |
| 4 | Access menu 1 as described in step 1. Slowly adjust "LOW" to the correct draft. | |
| | If the PDS shows an error (the alarm diode and PDS flashes), adjust the setting of the PDS. | |
| 5 | Only for <u>2-stage</u> systems: | |
| | Start the system on stage 2. Access menu 2 and slowly adjust "HIGH" to the correct draft. | |
| | Both boiler thermostats 1 and 2 must be connected (the BOILER 1 IN and BOILER 2 | |
| | IN diodes light green). | |
| 6 | Check that the monitoring system shuts down the boiler. If necessary, you can simulate an error condition by disconnecting the hose from the negative terminal on the PDS. | |
| 7 | After completing the commissioning, check the start-up function. | |

Refer to the boiler manufacturer's technical data for relevant pressure requirements and adjust the %-values accordingly. However the following value can be considered typical:

Boilers with atmospheric burners: typically 5–10 Pa

4. Pressure-controlled regulation of exodraft supply air fan

4.1 Use

General

- The EBC22 can be used to control an **exodraft** BESB or BESF box fan.
- The EBC22 can control a supply air fan directly or indirectly via a frequency converter.

Positioning

Fit the EBC22 and pressure transducer (XTP) in the boiler room as described in section 1.3 Fitting, page 5

4.2 Method of operation

General function

- The control system monitors the pressure in the boiler room and disconnects the burner in the event of errors (the alarmdiode on the EBC22 will turn on).
- When the pressure in the boiler room changes, the EBC22 will change the fan speed in order to meet the setpoint pressure for the boiler room.
- The EBC22 is linked to the boiler system in such a way that when a heating requirement arises, the EBC22 will start the fan and delay the start of the boiler until the pressure in the boiler room is sufficient.
- A safety function ensures that if the pressure in the boiler room is insufficient, the EBC22 will shut down the boilers.

4.3 Electrical connection



This work must be performed by a qualified electrical engineer, in accordance with locally applicable rules and legislation.

The installation of the supply cable must be carried out in accordance with applicable regulations and legislation.

The earth terminal ($_$) must always be connected.

When connecting pressure transducer (XTP) and frequency converter, screened cable must be used.

Isolation switch

exodraft stresses that in accordance with EU's Machinery Directive an isolation switch must be set up in the fixed installation.

The isolation switch is not supplied by **exodraft**. Available as an extra.

4.4 Sample wiring diagram


The following sample wiring diagram shows how to connect the EBC22 to a frequency converter/MPR relay. **exodraft** recommends that you contact the boiler manufacturer for details of correct connection of the boiler control system.



4.4.1 Connection of frequency converter/MPR relay

This example shows which inputs/outputs on the EBC22 need to be connected to the frequency converter/MPR relay.

- Connect the supply voltage to terminals 1–3.
- Loop terminals 12 & 20.
- Connection to the boiler:
 - Connect the burner start signal to terminals 13 & 14.
 - Connect the potential free contact to terminals 11 & 19.
- Frequency converter:
 - Connect terminals 7 & 8 to the start/stop input on the frequency converter.
 - Connect terminals 21 & 22 to the frequency converter input for external speed regulation.
- Connect the pressure transducer (XTP) to terminals 23–28.

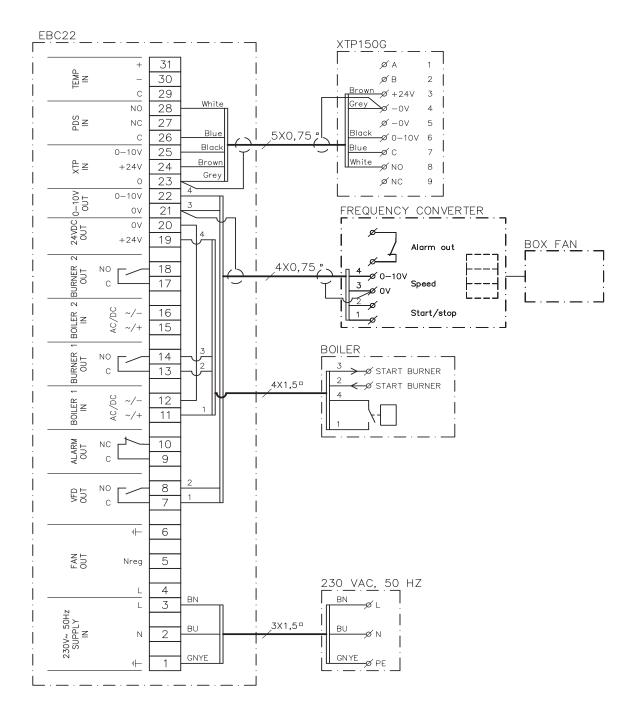

4.5 User menu

Layout of the user menu

The user menu consists of a single level and provides access to 4 parameters:

| Menu | Function | Range |
|------|---|--|
| 1 | Setting the required pressure | Depending on the XTP-range set in menus 151 and 152 |
| 2 | Setting the pre-purge period for the fan 0-999 s | |
| 3 | Setting the post-purge period for the fan | 0-60 min |
| 4 | Displaying current alarm (see alarm overview page 34) | - |

When the instructions refer to the menu numbers 1, 2, 3 and 4 it is understood that these numbers refer to the user menus.

4.5.1 Operating the user menu

Setting up the operating function

Before you can use the EBC22 for pressure controlled regulation of **exodraft** supply air fans, you will have to change the operating function.

For setting up the operating function, see page 14

Using the buttons

| Step | Press | То |
|------|-----------|---|
| 1 | OK | Activate the user menu |
| 2 | and | Go to the menu item you wish to edit |
| 3 | OK | Edit the menu item selected |
| 4 | and | Adjust the required set point |
| 5 | <u>OK</u> | Confirm the required set point |
| 6 | <u>OK</u> | To save the required set point: Press OK again within 5 seconds |
| 7 | RESED | Return to operation screen. |
| | | NB: If you do not press (ESE) the EBC22 will automatically |
| | | return to the operation screen after 30 seconds |

You can <u>always</u> undo an action (that you have not confirmed by pressing OK) and return to the operation screen by pressing RESE.

Adjust the set points for user menu items 1-4 as shown in the example on the following page.

Alarms

For alarm handling (menu 4), see page 33



4.6 Set-up

Setting the pressure

To set up the EBC22, do the following:

| Step | Action |
|------|--|
| 1 | • Follow the procedure on page 14 for changing the operating function into pressu- re-controlled regulation of an exodraft supply air fan, (O operating function 3). |
| 2 | • Follow the procedure page 10 (1.6) for setting the required pressure in the boiler room. The procedure is the same as for setting a chimney draft. The only difference is that the or symbol is shown in the display on completion of step 1. Set the pressure in accordance with locally applicable requirements. |

4.7 Commissioning

Commissioning of the EBC22 must be carried out so that the supply air fan ensures correct pressure in the room.

Commissioning should be carried out by staff with the appropriate training, and with the authorisation to do so according to local legislation.

Do as follows:

| Step | Action | |
|------|--|--|
| 1 | Provisional setting of the pressure in the boiler room | |
| | Press OK to go to Menu 1. | |
| | Press OK | |
| | • Press and to adjust the value until the required pressure is shown in the display. | |
| | • Press OK to confirm the set point. | |
| | • To save the set point: Press OK again within 5 seconds. | |
| | Press (ESE) to return to the operation screen. | |
| 2 | Start the boiler system at max. output. | |
| 3 | Check that the control system regulates to the set point. | |
| 4 | Check the safety monitoring. | |
| 5 | If appropriate, simulate error conditions by switching off the supply air fan. Burner is switched off (diode switches off) and the alarm diode illuminates. | |
| | After completing the commissioning, check the start-up function by restarting the system. | |

For the set point values, please refer to the data for the boiler in question. However, \pm 5 Pa can be considered typical.

5. List of alarms and troubleshooting

Some systems require a special start-up procedure following safety shut-down. Follow this procedure before pressing the (RESET) button.

5.1 Alarm handling

There are two levels of alarm handling:

- Resetting a current alarm (user menu)
- Resetting the alarm log (service menu)

5.1.1 Resetting a current alarm

An alarm situation in the system is indicated by the illumination of the EBC22 alarm diode (see page 7), and by the appearance of the alarm symbol \rightarrow in the display.

Automatic reset

If menu 25 is set to automatic reset (1), the EBC22 will attempt to reset an alarm every 10 seconds. If error persists, check the alarm overview (next page) for solution.

Manual reset

If menu 25 is set to manual reset (2), alarms must be manually reset. In the event of an alarm, undertake the following procedure:

| Step | Action | |
|------|---|--|
| 1 | Go to menu 4 (menu 5 for operating function 2, (P^{PM})) to display the current alarm. | |
| 2 | Check the alarm overview (next page) to identify the alarm number. | |
| 3 | Solve the error. | |
| 4 | Press (FSF) to reset the alarm* The alarm diode will switch off, and the alarm symbol — will disappear from the display. | |
| 5 | Restart the system if necessary. | |
| | After completing the commissioning, check the start-up function by restarting the system. | |

* The EBC22 will automatically return to the main screen if no buttons are pressed for 30 seconds. If this happens, repeat step 1.

5.1.2 Resetting the alarm log

The alarm log (menus 211–219) is a list of the 9 most recent alarms. To reset the alarm log, do the following:

| Step | Action |
|------|---|
| 1 | Go to menu 22 and select YES. |
| 2 | A 10-second countdown will start. Within these 10 seconds, you can cancel your choice by pressing any button. If you do not press any buttons, the alarm log will be reset. |
| 4 | Press (FSF) to return to the main screen |



5.1.3 Alarm overview

The table below presents an overview of the alarms that may occur (the alarm numbers are displayed in the alarm menu).

| Alarm | Error type | Solution | |
|-------|--|---|--|
| A00 | No error | | |
| A01 | XTP flow alarm Defaults (menu 23):Chimney fan: < 64% of set pressureAir supply fan: > 300% of set pressure | Check: The flue, the chimney and the chimney fan for blockages. The commissioning. That the measuring probe and the spigots on the pressure transducer are not blocked. | |
| A02 | PDS check error | Check:The setting of the monitoring unit (the PDS).The connection to the PDS.The PDS's switch function. | |
| A03 | PDS error (flow error) | Check that: The PDS is connected. The PDS is correctly adjusted in relation to the set point. Menu 31 has been set correctly (1). | |
| A04 | XTP Start Timer error (flow error) | Check:the hose to the pressure transducer.the commisioning.the chimney fan is of sufficient capacity. | |
| A10 | XTP not connected | | |
| A11 | PDS not connected | Check the PDS connection. | |
| A13 | AUX alarm (alarm for terminals 26–28) | Check:the connections to terminals 26–28.the setting in menu 31 (2).the loop between terminals 26 and 28. If XTP150 connected : power off/on the unit. If error persist contact dealer (defective unit). | |
| A14 | Temperature sensor not connected | Check:that the temperature sensor is connected of the connection is good, then the temperature sensor may be faulty. Change the sensor | |
| A15 | Temperature alarm | Inspect unit | |
| A16 | 24 VDC overloaded | Check the load on terminals 19-20. If error persists, contact dealer (defective unit). | |
| A17 | XTP connected (error only for the 2-stage speed regulation function) | Remove the XTP. The XTP must not be fitted in speed-regulation mode. | |
| A18 | XTP overload | Check if XTP is defective. | |
| A81 | E2prom read failure | Reset to defaults (menu 18). | |
| A82 | Error in Safety relay circuit | Turn the EBC22 off. | |
| A83 | Error in Safety relay circuit | Restart again. If error persists, contact dealer (defective unit). | |
| A84 | Error in Safety relay circuit | | |
| A85 | Safety No HeartBeat | _ | |
| A86 | Safety input circuit error | | |
| A87 | Safety input circuit error | | |
| A88 | Safety input circuit error | | |
| A89 | Faulty heartbeat from safe processor detected | | |
| A91 | Temperature sensor not connected | Check that the temperature sensor is connected If the connection is good, then the temperature sensor may be faulty. Change the sensor | |
| A92 | Temperature alarm | Inspect unit | |
| A98 | Faulty main processor | Reset to defaults (menu 18). | |
| A99 | Faulty main processor | Turn the EBC22 off. Restart again. If error persists, contact dealer (defective unit). | |

5.2 More troubleshooting


5.2.1 Program running

If there is doubt about whether the EBC22 is running: Check if the control LEDs are flashing.

To view the control LEDs: Remove the front panel.




This work must be performed by a qualified electrical engineer.

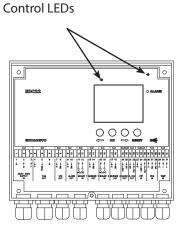

5.2.2 Communication error

If the display shows three horizontal lines in the lowest display box:

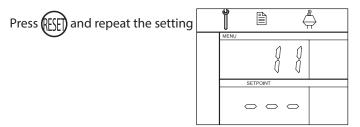

If the errror persists, then the EBC22 is faulty. Contact dealer.



6. Technical specifications

General

Height x width x depth: Weight: Protection class: Casing material:

Supply voltage: Charging current: Fuse: Ambient temperature: Regulation range: Wiring from EBC22 to chimney fan / fan

Inputs

| Digital inputs (BOILER 1 IN & BOILER 2 IN): | 18 to 230 VAC / VDC |
|---|---------------------|
| Pressure sensor-input (XTP IN): | 0 to 10 VDC, 20 mA |
| Pressure switch input (PDS IN): | 24 VDC, 20 mA |
| Temperature sensor (TEMP IN): | -30°C to +500°C |

Outputs

| Digital output relays | |
|--------------------------------------|-----------------------------|
| (BURNER1 OUT & BURNER 2 OUT): | 250 VAC, 4A, AC3 |
| Motor regulator (FAN OUT): | Supply voltage -3%, 3A, AC3 |
| Motor start/stop relay (VFD OUT): | 250 VAC, 8A, AC3 |
| Control signal 0–10 VDC (0-10V OUT): | 20 mA |
| 24 VDC supply (24VDC OUT): | 100 mA |
| Alarm output relay (ALARM OUT): | 250 VAC, 8A, AC3 |
| | |

Pressure transducer (XTP 150G)

Height x width x depth: Protection class: Ambient temperature: Wiring to EBC22 90 mm x 115 mm x 55 mm IP565 -25 ℃ to 50 ℃ Max. 100 m. shielded cable

204.3 mm x 239.5 mm x 77.2 mm

ABS PA 758 (AcryInitrile Butadiene

230-240 VAC +/- 10%, 50 Hz +/- 1%

Styrene PolyAmide 758)

1.62 kg

Max. 3A

-20°C to 60°C

-500 Pa to 500 Pa

Max. 100 m. shielded cable

T4 A

IP54

Third part approvals

The EBC22 is certified by GASTEC and have the certification number: PIN: 0063BV1148

7. EU declaration of conformity

exodraft a/s C.F. Tietgens Boulevard 41 DK-5220 Odense SØ DANMARK

hereby declares that the following product:

EBC22

which is covered by this declaration, is in accordance with the following standards:

EN 60335-1, EN60335-2-102, EN 61000-6-1, EN 61000-6-2, EN 61000-6-3, EN 301489-1, EN 301489-3, EN 300220-1, EN298:2003

in relation to the provisions of the following directives:

Low Voltage Directive:

2006/95/EC

EMC Directive:

2004/108/EC

Gas Appliances Directive:

2009/142/EC

Odense, 05-08-2013

Managing Director

Jørgen Andersen











DE: exodraft GmbH

Soonwaldstraße 6 DE-55569 Monzingen Tel: +49 (0)6751 855 599-0 Fax: +49 (0)6751 855 599-9 info@exodraft.de www.exodraft.de

DK: exodraft a/s

C. F. Tietgens Boulevard 41 DK-5220 Odense SØ Tel: +45 7010 2234 Fax: +45 7010 2235 info@exodraft.dk www.exodraft.dk

SE: exodraft a/s

Årnäsvägen 25B SE-432 96 Åskloster Tlf: +46 (0)8-5000 1520 Fax: +46 (0)340-62 64 42 info@exodraft.se www.exodraft.se

NO: exodraft a/s

Storgaten 88 NO-3060 Svelvik Tel: +47 3329 7062 Fax: +47 3378 4110 info@exodraft.no www.exodraft.no

UK: exodraft Ltd.

Unit 4B, Lancaster Ct. Coronation Road Cressex Business Park GB-High Wycombe HP12 3TD Tel: +44 (0)1494 465 166 Fax: +44 (0)1494 465 163 info@exodraft.co.uk www.exodraft.co.uk